

### Hydraulic Tube Bender

Series HTB & HTB-A
Operation and Maintenance Manual


Catalog: 02-0217ME

October 2013

aerospace
climate control
electromechanical
filtration
fluid & gas handling
hydraulics
pneumatics
process control
sealing & shielding





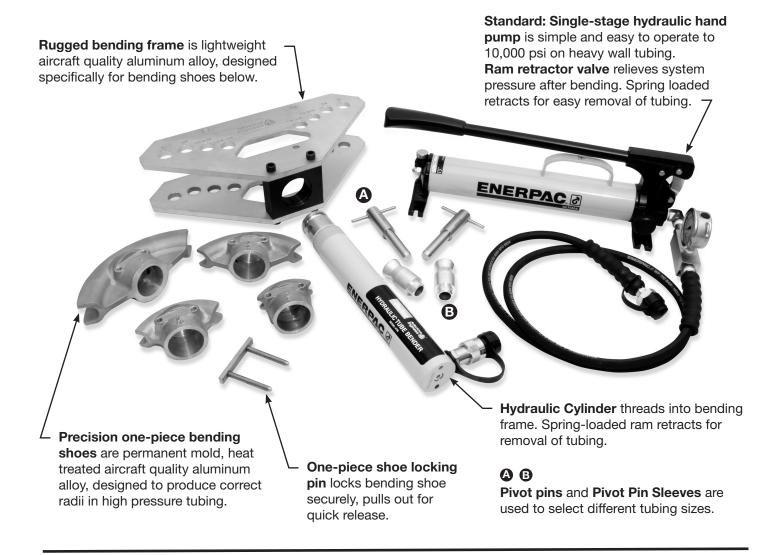

## Section 1.0 General Information

Parker Autoclave Engineers hydraulic tube bending system is designed expressly for Parker Autoclave Medium and High Pressure tubing of stainless steel and other materials. Used as intended, this equipment will provide rugged reliability and long service life in producing the correct safe bending radius consistent with the pressure handling requirements of the tubing.

This system provides fast accurate and reliable bending with the correct radii for O.D. tubing sizes from 1/4" through 1". Only one setup is required.

The Tube Bender is complete with pump, cylinder, frame and bending shoes, self contained in a portable case with a total weight of 57 lbs. (25.90 kg).

# Section 2.0 Assembly and Operation

Be sure to read the Hydraulic Pump and Cylinder instruction sheets before operating the system.

- 2.1 Thread cylinder into cylinder block on bending frame.
- Connect pump to cylinder by means of hose provided.
- 2.3 Thread ram saddle into cylinder.
- 2.4 Attach correct sized bending shoe onto ram saddle and secure with shoe lock pin.
- 2.5 Insert pivot pin assemblies into the correct matching bending frame holes for the tubing you intend to bend.





- 2.6 Position tubing onto the shoe, allowing sufficient length of tubing to contact both pivot pins (see image below).
  See Section 3 for minimum required tube length.
- 2.7 Activate hydraulic pump until tubing is bent to the desired angle, up to 90°. (Bend a few degrees over the desired finished angle to allow for the normal springback of the tubing).
- 2.8 To remove tubing, open the ram retractor valve on the manual pump. (On systems equipped with air-operated pump, press the "release" end of the pedal). Ram retracts for easy removal of tubing.

#### Caution

This system is NOT intended or recommended for bending carbon steel pipe, conduit or the like. These bending shoes are permanent mold, heat treated aircraft quality aluminum alloy, designed specifically for use with 1/4", 3/8", 9/16", 3/4" and 1" O.D. stainless steel or other quality tubing.

Pipe or other O.D.'s may create unfavorable stresses on the bending shoes.

Before bending, be sure BOTH PIVOT PINS are in the correct and matching frame position. Otherwise, unequal stresses may occur on the bending shoe.

Use the correct hydraulic fluid. The model HTB pump and cylinder require use of EnerPac#HF-101 hydraulic oil.



## Section 3.0 Minimum Bend (Mandrel) Radius

Shoe* Catalog Number	Tube Size inches (mm)		++	++ Minimum	Minimum Length
	Outside Diameter	Inside Diameter	Rated Pressure (bar)	Bend Inside Radius Inches (mm)	Required 90° Bend Inches (mm)
201A-6016	9/16	0.359	15,000	2.62	14
	(14.29)	(9.12)	(1034)	(66.5)	(35.6)
201A-6018	3/4	0.516	15,000	3.50	16
	(19.05)	(13.11)	(1034)	(88.9)	(40.6)
201A-6020	1	0.688	15,000	4.62	22
	(25.4)	(17.48)	(1034)	(117.3)	(55.8)
201A-6014+	1/4	0.109	20,000	1.25+	8
	(25.4)	(2.77)	(1379)	(31.8)	(20.3)
201A-6014	3/8	0.203	20,000	1.75	8
	(9.53)	(5.16)	(1379)	(44.5)	(20.3)
201A-6016	9/16	0.312	20,000	2.62	14
	(14.29)	(7.92)	(1379)	(66.5)	(35.6)
201A-6018	3/4	0.438	20,000	3.50	16
	(19.05)	(11.13)	(1379)	(88.9)	(40.6)
201A-6020	1	0.562	20,000	4.62	22
	(25.4)	(14.27)	(1379)	(117.3)	(55.8)
201A-6020	1	0.438	30,000	4.62	22
	(25.4)	(11.13)	(2068)	(117.3)	(55.8)
201A-6014+	1/4	0.083	60,000	1.25	8
	(6.35)	(2.10)	(4137)	(31.8)	(20.3)
201A-6014	3/8	0.125	60,000	1.75	8
	(9.53)	(3.18)	(4137)	(44.5)	(20.3)
201A-6016	9/16	0.250	40,000	2.62	14
	(14.29)	(6.35)	(2758)	(66.5)	(35.6)
201A-6016	9/16	0.188	60,000	2.62	14
	(14.29)	(4.78)	(4137)	(66.5)	(35.6)
NA **	5/16	0.062	150,000	6.00	8
	(7.94)	(1.57)	(10342)	(152.4)	(20.3)

Annealed Parker Autoclave Engineers pressure tubing may also be bent on HTB tube bender using bending shoe sizes specified above.

- \*HTB bending shoes are constructed of heat-treated aluminum alloy and designed specifically for use with Autoclave Engineers' heavy wall stainless tubing. They are not intended for bending such components as commercial pipe. Because of diameter differences, such misuse could fracture the bending shoe.
- \*\* Information on bending 150,000 psi (10342 bar) tubing is included here for reference only. This tubing should not be bent on HTB hydraulic tube bender because of the 6" required minimum radius.
- † Value shown is minimum bend radius of the tubing: bending shoe furnished (201A-6014) will bend tubing to 1.75" (44.5).
- †† Pressure rating of the bent tube will be reduced. Consult the Technical Application section for pressure rating at various bend radii.

All dimensions for reference only and subject to change.





### Section 4.0 Parts List

Hydraulic Tube Bender (manual hydraulic pump) Complete with caseModel HTB					
Hydraulic Tube Bender (air operated hydraulic pump) Complete with case Model HTB-A					
Portable CaseNo. P-10011					
Bending Frame (assembly with top and bottom plates, cylinder block, four cap screw assemblies and two frame feet)					
Hydraulic Cylinder No. P-1892					
Hydraulic Pump - Manual (standard) No. P-1893					
Hydraulic Pump - Air Operated (optional) No. P-1948					
Hydraulic Hose					
Bending Shoe:					
1/4" and 3/8" O.D					
1/2" and 9/16" O.D					
3/4" O.D					
1" O.D					
Ram SaddleNo. 101B-0313					
Shoe Lock Pin AssemblyNo. 101B-0314					
Pivot Pin Assembly (2 required per frame) No. 201A-6023					
Pivot Pin Sleeve (2 required per frame) No. 101B-0315					

## Section 5.0 Air-Operated Hydraulic Pump Option

Air-operated hydraulic pump option can be used in place of standard hand pump. (Add "-A" to order number). Operating pressure 0-10,000 psi (0-690 bar). Required air pressure 30 psi (2.1 bar) minimum, 120 psi (8.3 bar) maximum. Reservoir capacity 24 cu.in. (393cm³). Available with optional hydraulic pressure gauge and gauge adapter. A lubricator/air separator is recommended for air operated units.



#### WARNING

FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH,
PERSONAL INJURY AND PROPERTY DAMAGE.

This document and other information from Parker Hannifin Corporation, its subsidiaries and authorized distributors provide product or system options for further investigation by users having technical expertise. The user, through its own analysis and testing, is solely responsible for making the final selection of the system and components and assuring that all performance, endurance, maintenance, safety and warning requirements of the application are met. The user must analyze all aspects of the application, follow applicable industry standards, and follow the information concerning the product in the current product catalog and in any other materials provided from Parker or its subsidiaries or authorized distributors. To the extent that Parker or its subsidiaries or authorized distributors provide component or system options based upon data or specifications provided by the user, the user is responsible for determining that such data and specifications are suitable and sufficient for all applications and reasonably foreseeable users of the components or systems.

#### Offer of Sale

The items described in this document are available for sale by Parker Hannifin Corporation, its subsidiaries or its authorized distributors. Any sale contract entered by Parker will be governed by the provisions stated in Parker's standard terms and conditions of sale (copy available upon request).

© 2013 Parker Hannifin Corporation | Autoclave Engineers is a registered trademark of the Parker Hannifin Corporation

02-0217MF

October 2013





信德迈科技(北京)有限公司 CNMEC Technology 地址:北京市朝阳区望京SOHO-T1-C座2115室

邮编:100102

\*Tel: 010-8428 2935 | \* Fax: 010-8428 8762

\*手机:139 1096 2635

\*电子邮件: sales@cnmec.biz 主页:http://www.cnmec.biz ISO-9001 Certified